

## AUDIO AND TELEMATICS




1. Engine not running
  - Short press: on/off.
  - Long press: CD pause, mute for the radio.
- Engine running
  - Short press: CD pause, mute for the radio.
  - Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including also navigation messages and alerts)
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
5. Access to the "SETUP" menu.
  - Long press: access to the GPS coverage and the demonstration mode.



1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the following modes: Audio (AUDIO), Trip Computer (TRIP) and Telephone (TEL) functions.
4. Selection of source: radio, audio CD/MP3 CD, USB, Jack connection, Streaming.
5. Selection of FM1, FM2, FMast and AM wavebands.


## FUEL TANK

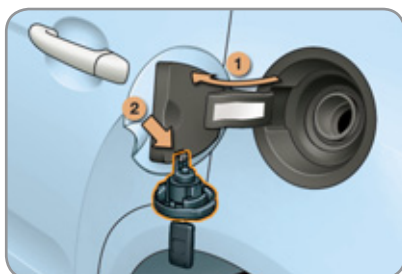

1. Opening the fuel filler flap.
  2. Opening and hooking the fuel filler cap.
- Tank capacity:
- approximately 50 litres (petrol),
  - approximately 48 litres (Diesel).

## REAR SEATS

Bench seat with fixed one-piece cushion and split backrest (left hand 2/3, right hand 1/3) which can be folded individually to adapt the load space in the boot.

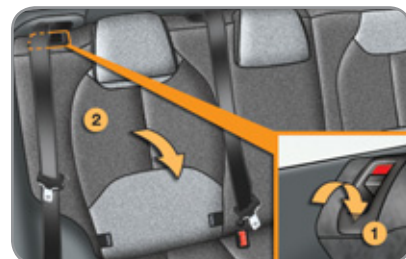

Folding the backrest

## BONNET




- A. Interior release lever.
- B. Exterior safety catch.
- C. Bonnet stay.



CITROËN


# READY TO GO CITROËN C3

## STEERING WHEEL ADJUSTMENT

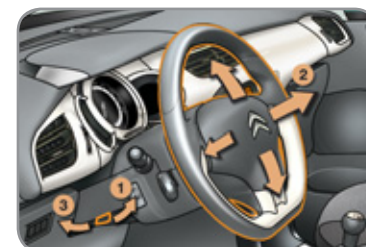

1. Unlocking the control.
2. Height and reach adjustment.
3. Locking the control.

## DOOR MIRRORS

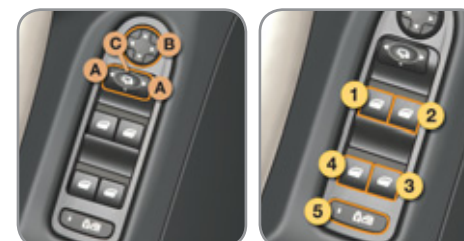

- A. Selecting the mirror.
- B. Adjusting the position of the mirror.
- C. De-selecting the mirror.

## ELECTRIC WINDOWS

1. Driver's electric window switch.
2. Passenger's electric window switch.
3. Rear right electric window switch.
4. Rear left electric window switch.
5. Deactivating the rear electric window and door switches.

## GEAR EFFICIENCY INDICATOR



System which reduces fuel consumption by advising the driver to change up on vehicles fitted with a manual gearbox.

## REMOTE CONTROL KEY



- A. Unfolding/Folding the key.
- B. Unlocking the vehicle.
- C. Normal locking of the vehicle. Vehicle location.

## PARKING BRAKE




### Applying

☞ Pull the parking brake lever fully up to immobilise your vehicle.

### Releasing

☞ Pull the parking brake lever gently, press the release button then lower the lever fully.

## 6-SPEED MANUAL GEARBOX

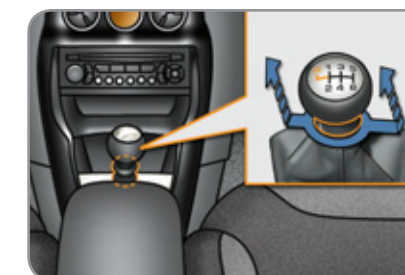


### Engaging reverse gear

☞ Raise the ring under the knob and push the gear lever to the left then forwards.

## AUTOMATIC GEARBOX



- P.** Park
  - R.** Reverse
  - N.** Neutral
  - D.** Drive (Automatic driving)
- ☞ Select position **P** or **N**.
  - ☞ Start the engine.
  - ☞ Select position **R**, **D** or **M**.
  - ☞ Gradually release the brake pedal. The vehicle moves off immediately.

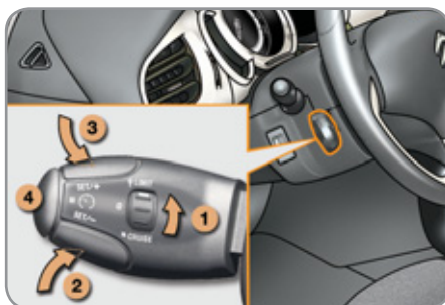

- SPEED LIMITER "LIMIT"**
- LIMIT**
1. Selecting/Switching off speed limiter mode.
  2. Decrease the programmed value.
  3. Increase the programmed value.
  4. Speed limiter on/off.

- CRUISE CONTROL "CRUISE"**
- CRUISE**
1. Selecting/Switching off cruise control mode.
  2. Decrease the programmed value.
  3. Increase the programmed value.
  4. Cruise control Off/Resume.

## SEEING CLEARLY

Depending on version, the instrument panel may have permanent back-lighting. Illumination of the instrument panel is therefore not linked to the exterior lighting.




### Ring A

- O** Lighting off.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped/main beam headlamps.

### Ring B

- Rear foglamps.
- or
- Front and rear foglamps.

## WIPERS

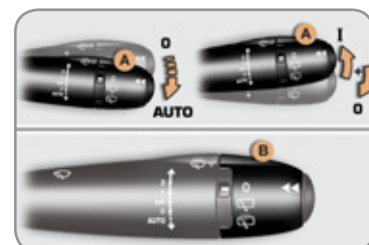

### Control stalk A: windscreen wipers

2. Fast wipe.
  1. Normal wipe.
  - Int.** Intermittent wipe.
  - O.** Park.
  - AUTO** ↓ Automatic wiping or single wipe.
- Wash-wipe: pull the control stalk towards you.

### Ring B: rear wiper

- Park.
- Intermittent wipe.
- Wash-wipe.

## REAR SCREEN DEMIST - DEFROST

I require...	Heating or Manual air conditioning				
	Air distribution	Air flow	Air recirculation/ Exterior air intake	Temperature	Manual A/C
HEAT					—
COOL					ON
DEMISTING DEFROSTING					ON

**Digital air conditioning:** use of the fully automatic mode by pressing the "AUTO" button is recommended.

## FRONT SEATS



1. Forwards-backwards adjustment.
2. Height adjustment.
3. Seat back angle adjustment.

## ZENITH WINDSCREEN



### Blind


- ☞ To open the blind, take it by its central grip **A**, then pull it backwards and guide it to the desired position.
- ☞ To close the blind, take it by its central grip **A**, then pull it forwards and guide it to the desired position.

## MAIN MENU



- ☞ Press the "MENU" button to gain access to the main menu.

### "SETUP" MENU

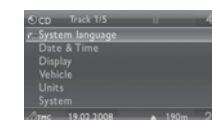

- ☞ Press the "SETUP" button to gain access to the "SETUP" menu.