



EMERGENCY CALL



ASSISTANCE CALL




1. On/Off and Volume adjustment.
2. Selection of the source: radio, Jukebox, CD and auxiliary (AUX, if activated on the Configuration menu). Long press: CD copy to hard disk.
3. Audio option adjustments: front/rear, left/right balance, loudness, sound ambiances.
4. Display the list of local radio stations, of the tracks on the CD or of the MP3/USB/Jukebox directories. Long press: update the local radio stations.
5. Automatic search for a lower/higher frequency. Selection of the previous/next CD, MP3, USB or Jukebox track.  
Long press: fast forward and backward play.
6. Selection of wavebands FM1, FM2, FMast, AM.
7. TA (Traffic Announcement) function on/off.  
Long press: access to the PTY (radio Programme Types) mode.
8. Ejection of the CD.

### MAIN MENU



### SETUP MENU

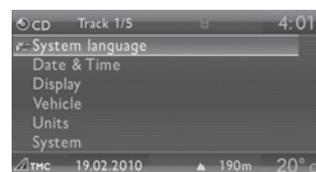

Press the "SETUP" button for access to the "SETUP" menu.



1. Engine not running
  - Short press: on/off.
  - Long press: CD pause, mute for the radio.
- Engine running
  - Short press: CD pause, mute for the radio.
  - Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including also navigation messages and alerts).
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
5. Access to the "SETUP" menu.  
Long press: access to the GPS coverage and the demonstration mode.
6. Access to the "Phone" Menu. Display the call list.
7. Access to the "MODE" menu.  
Selection of the successive display of:  
Radio, Map, NAV (if navigation is in progress), Telephone (if a conversation is in progress), Trip computer.  
Long press: display of a black screen [DARK].
8. Access to the "Navigation" Menu. Display the last destinations.
9. Access to the "Traffic" Menu. Display the current traffic alerts.
10. ESC: abandon the operation in progress.
11. CD eject.



1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the modes:  
Audio (AUDIO), Trip Computer (TRIP) and Telephone (TEL) functions.
4. Selection of source:  
radio, audio CD/MP3 CD, USB, auxiliary connection, Streaming.
5. Selection of FM1, FM2, FMast and AM wavebands.
6. Setting audio options: front/rear balance, left/right balance, loudness, sound ambience.
7. Display the list of local stations, the tracks on the CD or the MP3 folders.
8. Abandon current operation.
9. TA (Traffic Announcement) function on/off.  
Long press: access to the PTY (Types of radio programme) mode.



# READY TO SET OFF CITROËN C4 Picasso

### 6-SPEED ELECTRONIC GEARBOX SYSTEM



### Starting

- Check that the lever **3** is in neutral (position **N**).
- Press firmly on the brake pedal and turn the ignition key.

- R** Reverse
- N** Neutral
- A** Automatic mode
- M** Manual mode



- Using control paddles **1 "+"** and **2 "-"**:
- gear changing in manual mode,
  - temporary manual operation in automatic mode.



### REMOTE CONTROL KEY

- A.** Central locking
- B.** Unlocking
- C.** Guide-me-home lighting
- D.** Key release/storage

### ELECTRIC PARKING BRAKE



The electric parking brake operates as follows:

- Automatic application/release**  
Application is automatic when the engine stops, release is automatic on use of the accelerator.
- Manual application/release**  
Manual application/release of the parking brake is possible by pulling control lever **A** while pressing the brake pedal.

### Manual application

With the vehicle stationary, to apply the parking brake whether the engine is running or not, **pull** control lever **A**.

The application of the parking brake is confirmed by:

- the lighting of the warning lamp **P** in control lever **A** and in the instrument panel,
- the display of a message "Handbrake on" in the multifunction screen.

### Manual release

With the ignition on or the engine running, to release the parking brake, press on the brake pedal, or the accelerator, **pull then release** control lever **A**.


The full application of the parking brake is confirmed by:

- the extinction of the warning lamp **P** in control lever **A** and in the instrument panel,
- the display of a message "Handbrake off" in the multifunction screen.



### ELECTRIC WINDOWS

1. Driver's electric window control.
2. Passenger's electric window control.
3. Rear right electric window control.
4. Rear left electric window control.
5. Deactivation of the rear electric window and door controls.

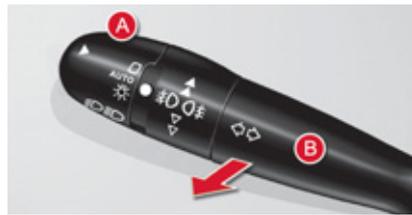


## EXTERIOR LIGHTING CONTROLS

**A.** Main lighting mode selection ring: turn it to position the symbol required facing the mark.

-  Lamps off.
-  Automatic illumination of headlamps.
-  Sidelamps only.
-  Dipped headlamps or main beam headlamps.

**B.** Stalk for switching headlamps: pull to switch the lighting between dipped headlamps/main beam headlamps.

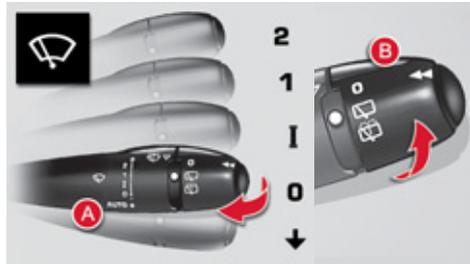

## WINDSCREEN WIPERS

**A.** Wiping speed selection stalk:

- 2** fast (heavy rain),
- 1** normal (moderate rain),
- I** intermittent (proportional to the speed of the vehicle),
- 0** park,
- ↓** single wipe (press down and release),

or

**AUTO ↓** automatic, then single wipe.

## REAR WIPER

**B.** rear wiper selection ring:

-  park,
-  intermittent wipe,
-  wash-wipe (set duration).



## SPEED LIMITER

1. Limiter mode On/Off.
2. Decrease the programmed value.
3. Speed limiter On/Off.
4. Increase the programmed value.




## CRUISE CONTROL

1. Cruise control mode On/Off.
2. Programming a speed/Reducing the programmed value.
3. Cruise control On/Off.
4. Programming a speed/Increasing the programmed value.



## FRONT SEATS

1. Forwards-backwards adjustment
2. Lumbar support
3. Seat height adjustment
4. Backrest angle
5. Armrest
6. Head restraint

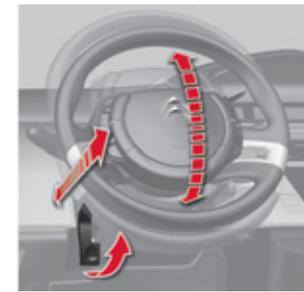

## STEERING WHEEL ADJUSTMENT

- ☞ First, adjust the driver's seat to the most suitable position.
- ☞ **When stationary**, pull the control lever to unlock the steering wheel adjustment.
- ☞ Adjust for height and reach.
- ☞ Push the control lever to lock the steering wheel adjustment.



SP95  
E10

SP98

DIESEL

## FUEL TANK

Capacity: approximately 60 litres.

Press control **A**, located on the switch panel to the left of the dashboard. The fuel flap automatically opens up fully. Insert the pump nozzle so as to push in the metal flap **B**. Push the fuel filler flap to close it.



## BONNET

- ☞ Open the left hand front door.
- ☞ Pull the interior release lever **A**, located at the bottom of the door frame.
- ☞ At the front of the bonnet, push the exterior safety catch **B** to the left and raise the bonnet.



## DOOR MIRRORS

### Adjustment

With the ignition on:

- ☞ move control **A** to the right or to the left to select the corresponding mirror,
- ☞ move control **B** in one of four directions to adjust,
- ☞ return control **A** to the central position.




## DIGITAL AIR CONDITIONING

- **Digital air conditioning:** the fully automatic mode is recommended - press "AUTO".

1. Automatic comfort regulation
2. Adjustment of temperature
3. Adjustment of air fan speed/Activation of the "REST" function
4. Adjustment of air distribution
5. Air recirculation
6. Activation/deactivation of rear passenger controls
7. Panel display mode: black panel function
8. Demisting/defrosting the rear screen
9. Rapid demisting/defrosting of the front and rear windows

## THIRD ROW SEATS (GRAND C4 PICASSO)

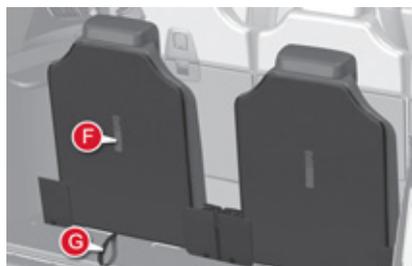


### Unfolding the seat

- ☞ Return the second-row rigid panels to their initial position and lock them.
- ☞ Having folded your concertina board, pull on the control **F** located behind the seat backrest. The backrest pivots rearwards, pulling the seat base with it. The seat locks in the open position.

### Repositioning the seat

- ☞ Return the second-row rigid panels to their initial position and lock them.
- ☞ Lower the head restraints.
- ☞ Correctly position the concertina board vertically behind the seat.
- ☞ Pull on the control **G**, located at the bottom of the seat backrest. The seat unlocks.
- ☞ Next push the backrest gently forwards. The backrest pivots, folding onto the seat base. The seat base then folds into the stowage area provided for that purpose.
- ☞ Reposition the concertina boards over the folded seats.

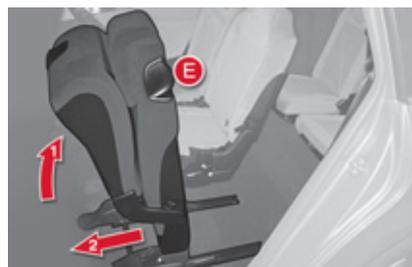

### Access to the third row seats

Access to the third-row seats is via the outer second-row seats.

- ☞ Pull the lever **E**. The seat unlocks and the seat cushion comes up against the backrest.
- ☞ Hold the lever **E** in the raised position, pushing forwards. The whole seat slides towards the front seat.

Space becomes free behind the seat, the third-row passengers can get to their seats.

### Exit from the third row seats

- ☞ Hold the lever **E** in the raised position. The seat unlocks and the seat cushion comes up against the backrest.
- ☞ Push the seat backrest, still holding the lever **E** in the raised position.

If the table on the back of the first-row seat is down, close it to enable this operation.

### Repositioning a seat, from the outside, with the door open

If there are passengers seated in the third row:

- ☞ manually return the assembly as far as possible rearwards; the seat does not return as far as the maximum rearwards position so as to retain legroom for the third-row passengers,
- ☞ fold the seat cushion until it locks.


Ensure that there is no object on or under the seat that you want to move.

## SECOND ROW SEATS



### Forwards-backwards adjustment

Lift the control **A**, located at the front of the seat, then move the seat to the desired position.

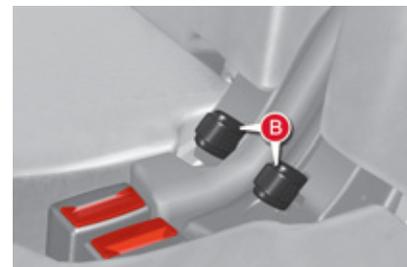


### "Comfort" position

- ☞ Pull on the control **B** and guide the seat rearwards. The backrest reclines and the seat base pivots slightly.

### Returning the seat to the initial position

- ☞ Pull on the control **B** and allow the seat to come forwards.

## SECOND ROW SEATS (C4 PICASSO)

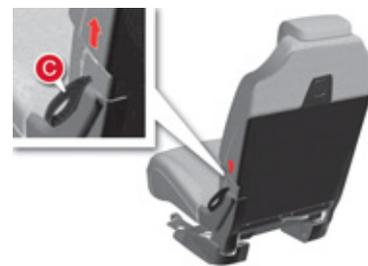

### Folding a seat


Each seat can be folded onto the floor to enable you to modify your vehicle's interior space.

- ☞ Pull firmly upwards on strap **C**, as indicated by the red arrow, to unlock the seat; keep pulling until the seat is fully folded. Push the seat backrest gently forwards so that the backrest folds onto the seat cushion. The assembly lowers onto the floor.

### Repositioning a seat

- ☞ Raise the backrest and push it rearwards until it locks in position.

## SECOND ROW REAR SEATS (GRAND C4 PICASSO)

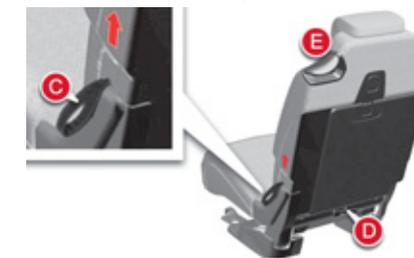

### Folding a seat

#### From the outside

- ☞ Pull firmly upwards on strap **C**, as indicated by the red arrow, to unlock the seat; keep pulling until the seat is fully folded. Push the seat backrest gently forwards so that the backrest folds onto the seat cushion. The assembly lowers onto the floor.

#### From the boot (when loading, for example)

You can fold the second-row seat(s) from the boot, having first folded the third-row seats.

- ☞ Pull on the strap **D** to unlock the chosen seat, push the backrest gently forwards.

To prevent any damage to the mechanism, the strap **D** unclips under excessive force. Simply clip it back in place to render the system operational.

### Repositioning a seat

- ☞ Return the second-row seat rigid panels to their initial position and lock them in position.
- ☞ Raise the backrest and push it rearwards until it locks in position.



### "Cinema seat" position

This position allows you to free up space between the first row and the second row.

Pull the lever **E** under the seat.

This position is only possible with the outer seats.