



OPENING THE BONNET

The bonnet release should only be operated when the vehicle is stationary.

- ☞ Open the driver's door.
- ☞ Pull release lever **A** to unlock.
- ☞ Lift up safety catch **B**, then raise the bonnet.



FUEL TANK

To open the fuel filler flap, press on it at top left, then pull from the rear edge.

Locking filler cap

- ☞ Turn the key a quarter turn to lock and unlock the filler cap.

When refuelling, place the cap on hook **F**.

Tank capacity: approximately 71 litres


MISFUEL PREVENTION

Mechanical device which prevents filling the tank of a Diesel vehicle with petrol. It avoids the risk of engine damage that can result from filling with the wrong fuel.

When a petrol filler nozzle is introduced into the fuel filler neck of your Diesel vehicle, it comes into contact with the flap. The system remains closed and prevents filling.

Do not persist but introduce a Diesel type filler nozzle.

DUAL-ZONE DIGITAL AIR CONDITIONING

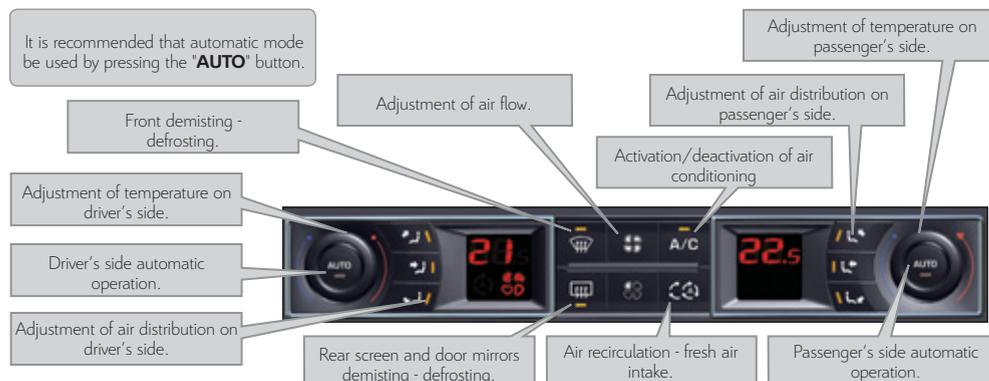

MANUAL PARKING BRAKE


Application

- ☞ Pull the parking brake lever up to immobilise your vehicle. To facilitate the action on the lever, you are recommended to press the brake pedal at the same time.


Release

- ☞ Press on the end of the lever whilst pulling it then lower it fully.

MAIN MENU

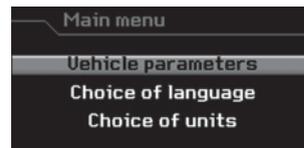

"SETUP" MENU

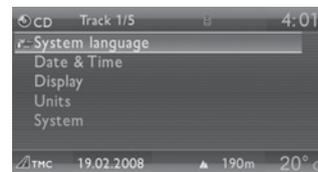

- ☞ Press the "SETUP" button to gain access to the "SETUP" menu.

PERSONALISATION - CONFIGURATION



READY TO SET OFF CITROËN C5

STEERING WHEEL ADJUSTMENT



- ☞ First, adjust the driver's seat to the most suitable position.
- ☞ When stationary, pull the lever **A** to unlock the steering wheel adjustment.
- ☞ Adjust for height and reach.
- ☞ Push the lever to lock the steering wheel adjustment.




ELECTRIC DOOR MIRRORS

1. Selection of door mirror:

- A.** Left hand side.
- B.** Right hand side.
- C.** Foldback/Unfold.

2. Directional control for mirror selected.

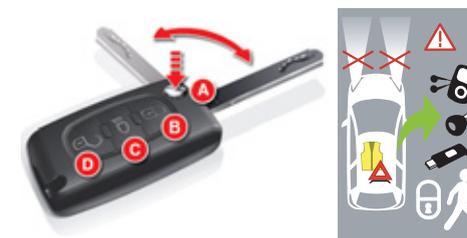

REMOTE CONTROL KEY

- A.** Key release/storage.
- B.** Normal locking of the vehicle (a single press) or deadlocking the vehicle (two presses in succession).
- C.** Guide-me-home lighting.
- D.** Unlocking the vehicle.

ELECTRIC PARKING BRAKE



The application of the parking brake is confirmed by:

- (P)** - the lighting of the warning lamp **P** in control lever **A** and in the instrument panel,
- the display of a message "Handbrake on" in the multifunction screen.

Application with the engine running

With the engine running and the vehicle stationary, in order to immobilise the vehicle you need to manually apply the parking brake by **pulling** on control **A**

Application with the engine off

With the vehicle stationary, the parking brake is **automatically applied when the engine is switched off**.

The application of the parking brake is confirmed by:

- (P)** - the extinction of the warning lamp **P** in control lever **A** and in the instrument panel,
- the display of a message "Handbrake off" in the multifunction screen.

Release

The electric parking brake **releases automatically and progressively** when you press the accelerator:

- ☞ with a **manual gearbox** (first gear or reverse gear engaged), press down fully on the clutch pedal then press on the accelerator pedal and move off.
- ☞ with an **automatic gearbox**, accelerate with the selector in position **D, M** or **R**.

When stationary, with the engine running, do not press the accelerator pedal unnecessarily (particularly when starting the engine, including in neutral), as you may release the parking brake.

STOP & START

The Stop & Start system puts the engine temporarily on standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...). The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently.


Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

Going into engine STOP mode

ECO The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby.

Going into engine START mode

ECO The "ECO" warning lamp goes off and the engine starts.

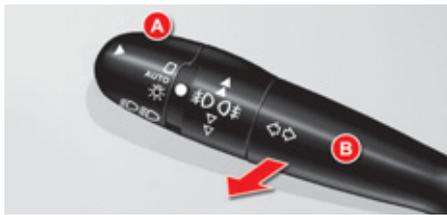


EXTERIOR LIGHTING CONTROLS

A. Main lighting mode selection ring: turn it to position the symbol required facing the mark..

-  Lamps off.
-  Automatic illumination of headlamps.
-  Sidelamps only.
-  Dipped headlamps or main beam headlamps.

B. Stalk for switching headlamps: pull to switch the lighting between dipped headlamps/main beam headlamps.

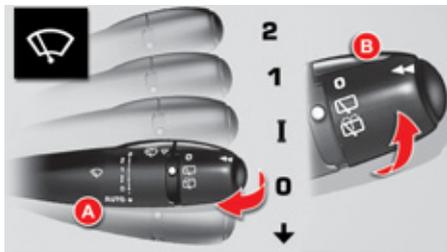

WINDSCREEN WIPERS

A. Wiping speed selection stalk:

- 2** fast (heavy rain),
- 1** normal (moderate rain),
- I** intermittent (proportional to the speed of the vehicle),
- 0** park,
- ↓** single wipe (press down and release),
or
- AUTO ↓** automatic, then single wipe.

REAR WIPER (TOURER)

B. rear wiper selection ring:

-  park,
-  intermittent wipe,
-  wash-wipe (set duration).



SPEED LIMITER

1. Selection of «LIMIT» : Activation of speed limiter mode.
2. "SET +" : Increase of the maximum speed.
3. "SET -" : Reduction of the maximum speed.
4. Suspension or resumption of mode.
5. Deactivation.
The chosen speed is memorised.

CRUISE CONTROL

1. Selection of «CRUISE» : Activation of cruise control mode.
2. «SET +» : Increase of the memorised speed (system ON).
3. «SET -» : Reduction of the memorised speed (system ON).
4. Suspension or resumption of mode.
5. Deactivation.



5-SPEED MANUAL GEARBOX

Engaging reverse gear

☞ Push the gear lever to the right then rearwards.



6-SPEED MANUAL GEARBOX

Engaging reverse gear

☞ Raise the ring under the knob (indicated by the arrow) and push the gear lever to the left then forwards.
Only engage reverse gear when the vehicle is stationary with the engine at idle.



AUTOMATIC GEARBOX

- P** : Park.
- R** : Reverse gear.
- N** : Neutral.
-  Operate the starter.
-  Select first gear (position **M** or **A**) or reverse (position **R**).
-  Release the brake pedal, then accelerate.



FRONT SEATS

1. Adjustments to the height and angle of the head restraint
2. Adjustments of the backrest angle
3. Adjustment of the seat height
4. Longitudinal adjustment of seat
5. Adjustment of lumbar support
6. Heated seat controls

FIXED CENTRED CONTROLS STEERING WHEEL

1	Rotation	<ul style="list-style-type: none"> - Radio source: Scroll the pre-set stations. - CD/MP3 CD/CD changer/jukebox source: Scroll the CDs or directories. - On the multifunction screen menus: Movement and increase/decrease.
	Short press	<ul style="list-style-type: none"> - On the multifunction screen menus: confirm. - Open the short-cut menus (depending on the multifunction screen page).
	Long press	Open the multifunction screen main menu.
2	Short press	Cancel the current operation and return to the previous page on the multifunction screen. When an incoming telephone call is received: Refuse the call.
	Long press	Return to the initial page on the multifunction screen.
3	Short press	Access to the multifunction screen general menu.
4	Short press / Maintained press	Volume increase.
5	Short press / Maintained press	Volume decrease.
6	Short press	<ul style="list-style-type: none"> - First press: mute. - Second press: restore sound.
7	Short press	<ul style="list-style-type: none"> - Radio source: Automatic search of higher frequencies. - CD/MP3 CD/CD changer/jukebox source: Search for the next track.
	Maintained press	CD/MP3 CD/CD changer/jukebox source: Fast forward play.
8	Short press	<ul style="list-style-type: none"> - Radio source: Automatic search of lower frequencies. - CD/MP3 CD/CD changer/jukebox source: Search for the previous track.
	Maintained press	CD/MP3 CD/CD changer/jukebox source: Fast backwards.
9	Short press	<ul style="list-style-type: none"> - Radio source: display the list of radio stations available. - CD/MP3 CD and CD changer source: display the list of CD tracks and directories. - Jukebox source: display the list of albums.
	Long press	Update the list of radio stations.
10	Short press / Long press	Horn.
11	Long press	MODE: selection of the type of information presented on the multifunction screen.